# conic

# **Technical Guidance**

PRACTICE

Vol. PB-10

#### **PROBLEMS OF BENDING 3**

This time, we will explain the main causes of cracks and countermeasures.

#### **COUNTERMEASURE FOR CRACK / FRACTURE**

A crack is a "fracture" and is a common phenomenon in bent parts. As it progresses, it may become a "rip".



Fracture on the edge

#### [Relationship with material rolling direction]



**MEASURES** Increase inner radius. Especially for aluminum materials, it is desirable that the R is more than the plate thickness.

#### [Relationship with burr direction]



When bending a material punched with a tool, the rate of occurrence of cracks varies between the inside and outside burr directions.



#### **MEASURES**

- 1. The better the surface roughness of the material, the greater the elongation limit = the less likely it is to crack. The material extracted in the tool has a fracture surface on the burr direction side. Therefore, cracks are less likely to occur when a shear surface is brought to the outside.
- 2. If the outer R side is a fracture surface (burr surface) and the inner R side is a shear surface, deburr in advance and adjust the surface roughness before bending.

Continue to the next page

#### [Relationship between external shape and bending line]

### FACTOR

As shown in the illustration below, if the outline of the blank and the bending line match, the outline of the blank in the bending radius area is disturbed, so that the material cannot be moved due to bending and does not stretch.



# **MEASURES**

- 1. Displace the bending line and the outline, and attach a straight part.
- 2. Increase the bending radius.
- If 1 and 2 are not possible, make a cut. (Reference: Material thickness ~ About twice of material thickness)



#### [Relationship with bending width]

# FACTOR

In the case of a narrow bend having a bending width of eight times or less the plate thickness, the bend is in a crushed state, which also affects the bending width direction, and the bend is easily broken.





- 1. Reduce the bending speed.
- 2. Increase the bending radius.
  - 3. Set the burr direction (fracture surface) inside the bend.

For **More** information, please contact CONIC tool sales desk.

#### CONIC Co., Ltd.

10–5 Taiheidai, Shoo-cho, Katsuta-gun, Okayama 709–4321 Japan Email: tools@conic.co.jp https: //www.conic.co.jp

## CONIC PRECISION Co., Ltd.

55/22 Moo 4, Buengkumphroy, Lumlukka, Phatumthani 12150 Thailand TEL: (662) 159-9870 FAX: (662) 159-9872 Email: conic\_thai@conic.co.jp