
15. Marking (Emboss)

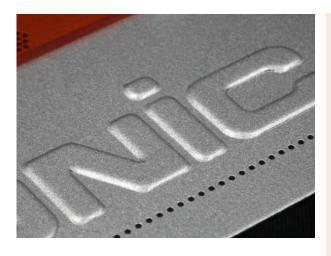

■Usage

Used for stamping identification mark and lot number.
engraving a pattern on a workpiece.

■Shapes Overview

The concavo and the convex mark is engraved on the punch and the die, designated characters and patterns are punched on a workpiece.

Examples



Earth mark used in a home appliance.



Piping indication of a water heater.



Example of dedicated logo.

Request for a quotation is here.